


# Water Tank 4.1

## Quick Start Guide

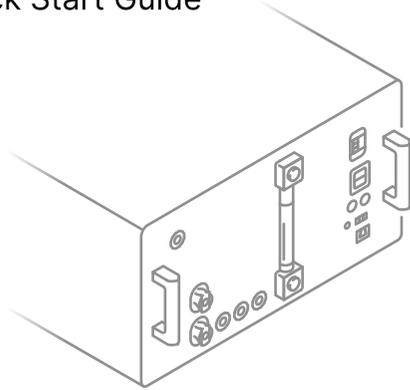


### 1 Check Installation

- You must follow **owner's manual** for all steps, including pipe and wire connection, operation, transportation, storage and disposal.


Download the latest owner's manual at [handbook.enapter.com](http://handbook.enapter.com)

- Ensure the supplied antenna is screwed into **Ant. port**.

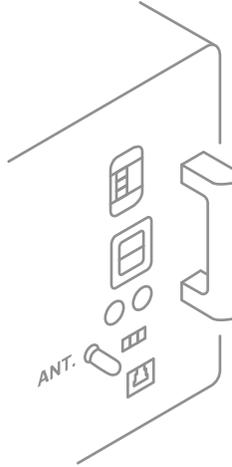


### 2 Water Inlet And Outlet

- To prevent obstructions, all water pipes must be flushed with demineralized water before connecting the water source.
- Ensure the **H<sub>2</sub>O In port** is connected to a water purification system, or any other source of deionized water following Enapter's requirements.
- H<sub>2</sub>O Out port** must be connected to a Enapter Electrolyser.

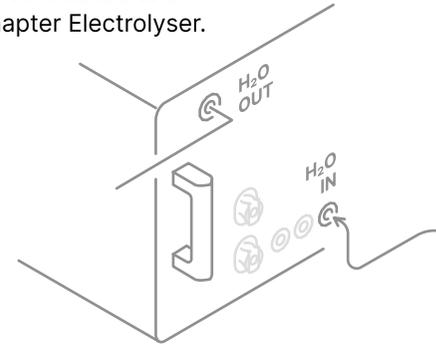

### 3 Overfill & Maintenance

- Ensure the **Overfill port** is connected to a suitable drain location where deionized water can be drained in case of overfilling.
- Maintenance port** also must be connected to a drain location to allow deionized water discharge in the event of automatic flushing due to non-compliant water specifications.

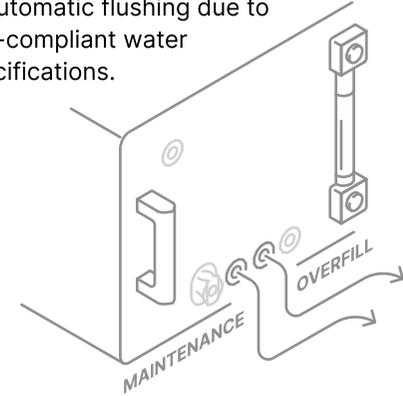

#### Download Enapter App

Enapter app makes devices setup and maintenance easier and fast.



[app.enapter.com](http://app.enapter.com)

#### Enapter Handbook

Owner's manuals and technical information for Enapter's hardware and software.

[handbook.enapter.com](http://handbook.enapter.com)


### 4 First Power-On & Refilling

- Ensure the power input cable is connected to the **Power port**.
- Switch on the machine using the switcher.
- Push **Start/Stop button**: the tank will start filling immediately. If this does not occur, ensure the Overfill line is not obstructed.
- The **yellow & green LEDs** will blink sequentially then the maximum water level is reached. If a manual refilling is needed please, refer to owner's manual.



### 5 Connect to Enapter Cloud

- Keep the device powered. Make sure WiFi button is turned on (blue LED steady on the front panel of electrolyser).
- Download the Enapter App and sign into your Enapter Cloud account.
- Create your site and press **Add Device**.
- Scan the QR-code** located on the front side of the device. If you can't scan the QR code, enter the device ID and PIN manually. You can find them on the back of the device.
- Follow the instructions in the Enapter App to connect the device.

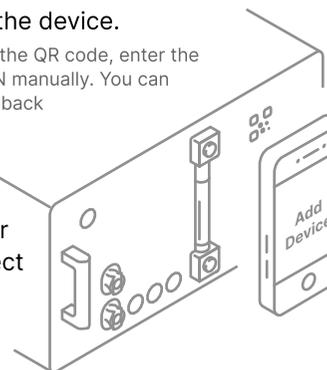

### 6 Water Tank Is Ready

- Monitor device activity in the Enapter App or Enapter Cloud.
- During normal operation, the LEDs indicate the status of the machine. LED indications at [handbook.enapter.com](http://handbook.enapter.com)

\* Alternating current voltage of 220-240V is potentially lethal! Direct current voltage of 48-60V can be a hazard!